


# Renault clay proud V4.6 charged suction installation instruction




1. Remove the door trim

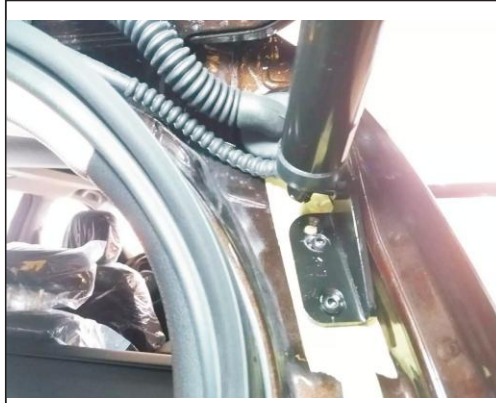

2. Remove the original car right bracket and brace, installing bracket at the lower right




3. In the original car upper ball head installation we poles

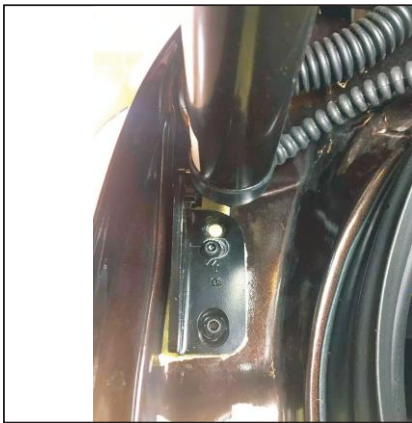


4. Remove the original car bottom bracket and brace, install our bottom bracket



5. In the original car upper ball head installation we poles

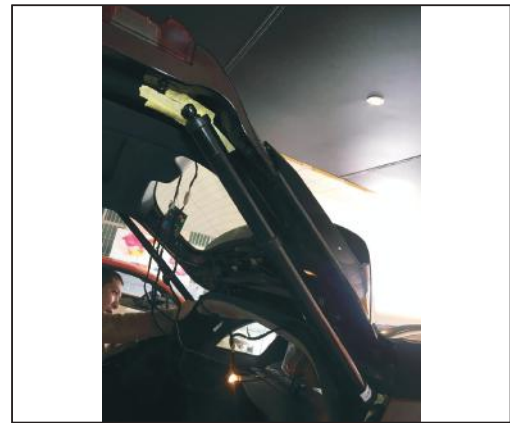


6. Strut installation is complete

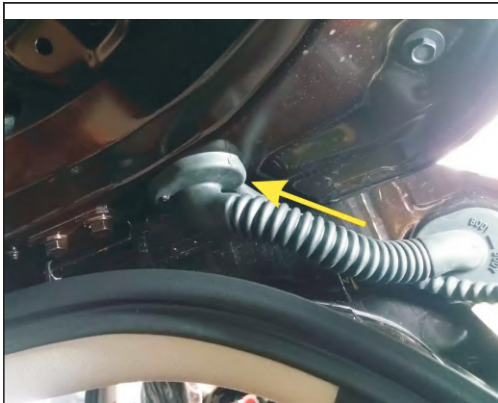


7. Wear the line on the right side of the hall from the original car rubber plug into the (or steps)




8. Hall line through the rubber plug door trim line to end

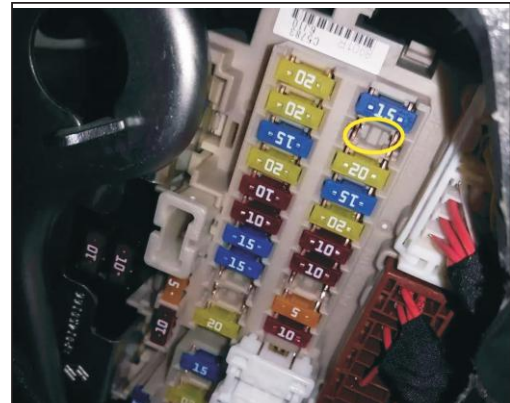


9. In the main drive side remove the plaque, found the power supply

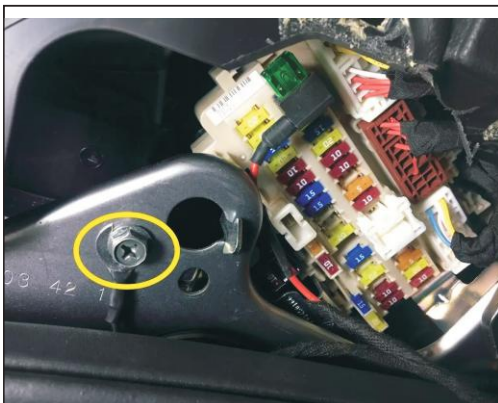

10. Connected to ground

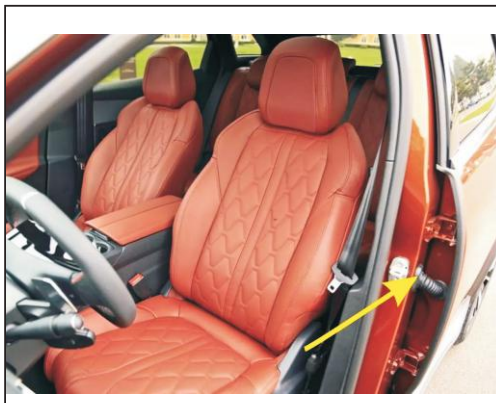


11. In the main drive belt B column in the rubber plug will be removed, find the Central Line

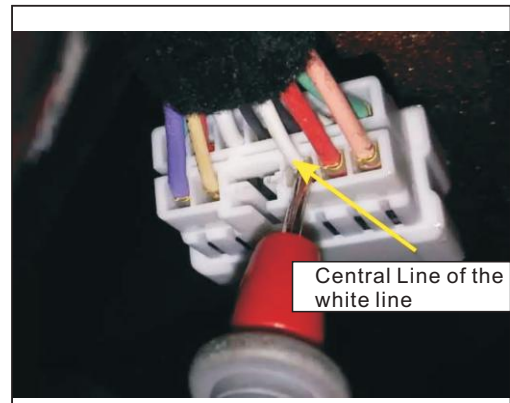


Central Line of the white line

12. Central Line by white line (from left to right in the first row third hole)




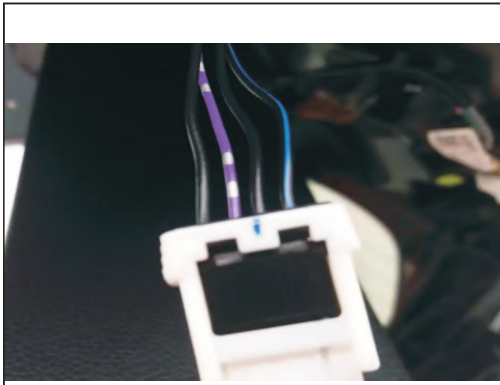

13. Insert the locks seat to our company with the tee adaptor

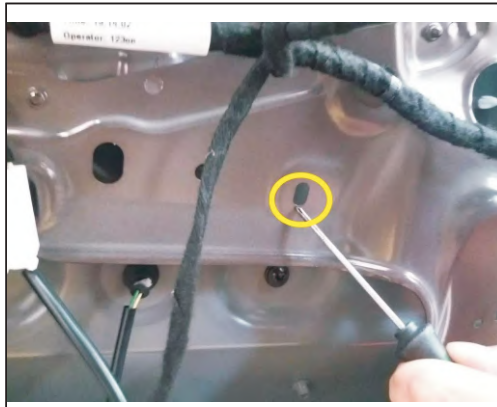

14. Install the central control box

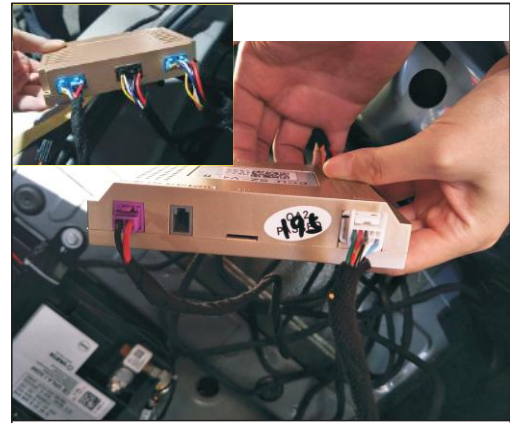

15. Put the hole line, power line, electric line socket according to color a pair of control box



16. In the tail door trim punch, install door switch our end



17. Remove the original lock buckle, install our electric lock



18. The motor installed in a spare tire, with our company 3 m glue



19. In the original car trim punch installed our door switch button