

Honda FREED under electric suction V4.6 installation instructions



1. Remove the original car right bracket and brace, installing stents and brace, use our screws



2. Remove the original car right bracket, installation bracket at the lower right, with our screws




3. Remove the original car left bracket and brace, installation of upper bracket and brace, use our screws




4. Remove the original car bottom bracket, installation, bottom bracket, with screws



5. The installation is complete

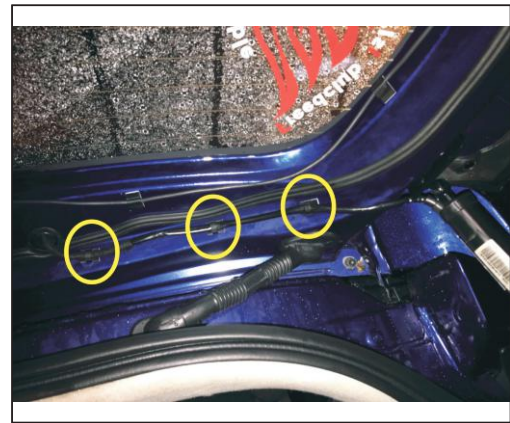

6. With our circle of the fixed hole line

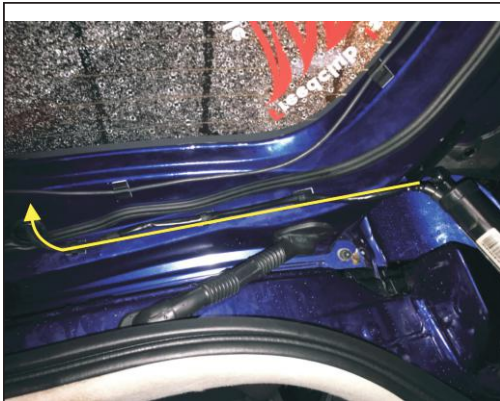

7. We delay the yellow line through the rubber plug hole hall, go line to stern door cover plate (or steps)



8. Below the main driving remove the plaque, find the original vehicle power supply, fuse, unplug the original car plug in power socket



9. Found at the bottom of the main driving ground screw, connecting our earth



10. In the main drive belt B column below remove the plaque to find the original car Central Line



11. Our yellow Central Line meet the saddle gray line




12. Remove the original lock buckle, install our electric lock, in the original car screws



13. Before switching line lines to connect this seat white and black



14. Find the seat in the tail gate, remove the plug we tee adaptor

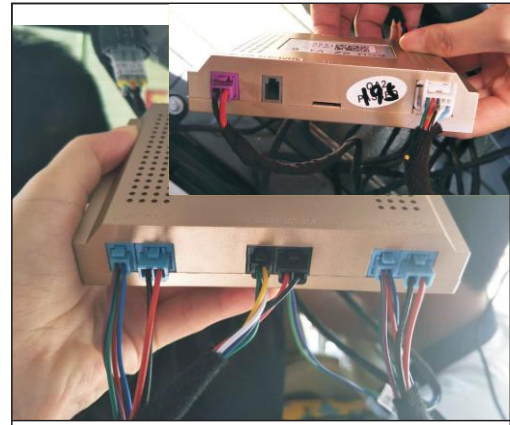

15. Hall line, control line, the power cord according to color a pair we control box



16. Installation position and control box, with our cable tie



17. Remove the original rear door trim, stiletto installation we stern door keys